


**NOTE: This router requires a 3/4" pocket or use of 8" X 8" black rubber gasket for router table installation. Pages 28. 31 & 32**

*Original subbase may be drilled and used as spacer.*

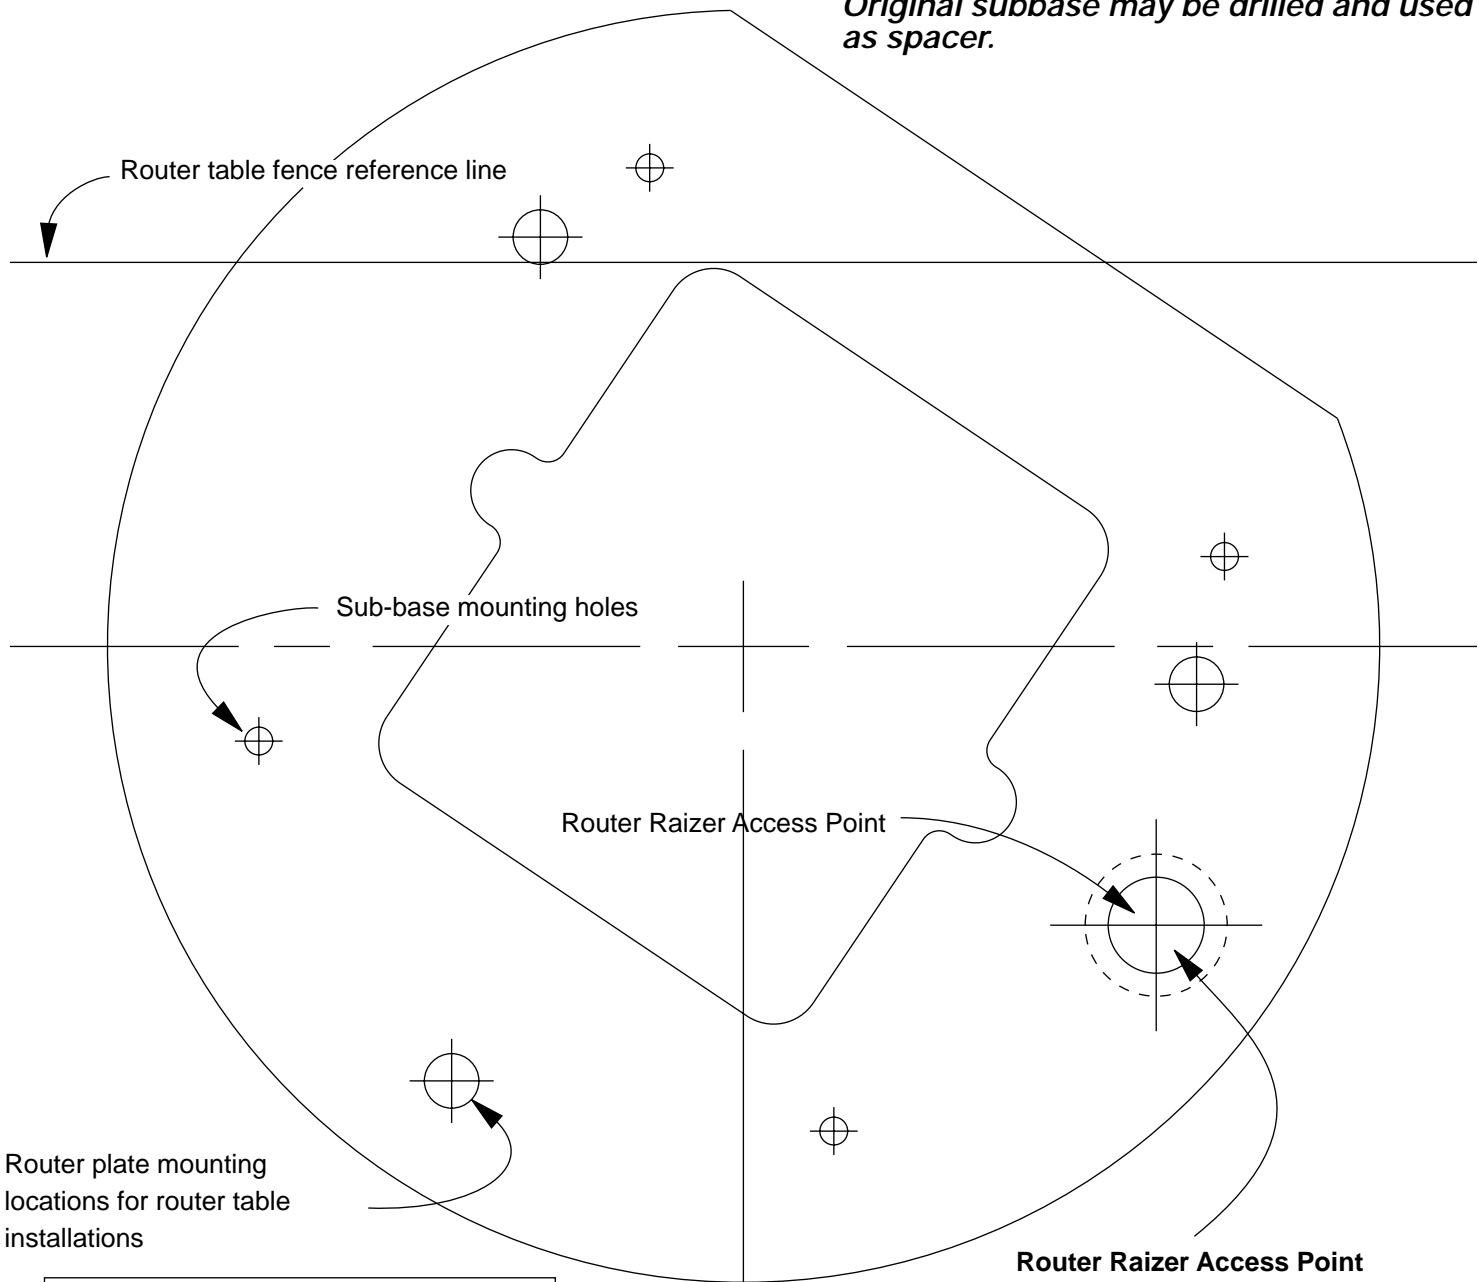

Router plate mounting locations for router table installations

**Router Raizer Access Point**

Drill .500" hole through router table insert plate  
install #30 dust cover insert into .500" hole and press flush with top of insert plate

**NOTE: This hole must be drilled 1/2" or .500" for #30 dust cover insert to fit properly.**


**Router Raizer Access Point**

3/4" reference circle for drilling the routers original subbase only. Table mounted, drill 1/2" hole in table top.

**1/2" = .500**

.500" reference circle for drilling table top or insert plate.

Use this 6" scale to check accuracy when copied



**Freud FT2000**

**Note:** Cross lines for locating and drilling holes are accurate. The illustration of subbase may vary slightly in size and design, but is accurate enough for cutting the rubber gasket if required.