
NOTE: This router requires a 3/4" pocket or use of 8" X 8" black rubber gasket for router table installation. Pages 28. 31 & 32

If the rubber spacer gasket Is used between the router and the original subbase, cut the subbase mounting holes in the rubber gasket to the approximate size of the dotted circle

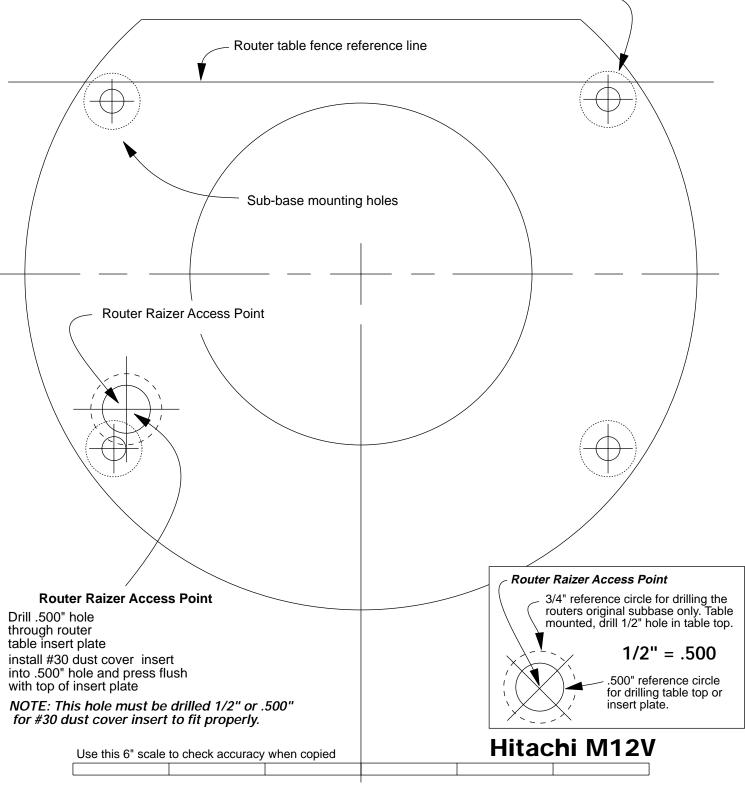

Note: Cross lines for locating and drilling holes are accurate. The illustration of subbase may vary slightly in size and design, but is accurate enough for cutting the rubber gasket if required.